

Airport Rules for Vehicles - Goolwa Airport

Airport Use

1. The speed limit for **all vehicles** on airport property is **20 kph**.
2. Do not park where you might obstruct other aircraft or airport vehicles.
3. Any damage to Airport property must be paid for immediately, this includes ruts and any other damage that requires repair.
4. **All visitors and users of the Goolwa Airport must comply with any request from airport management at all times.**

Airport Access

5. Access through the airport gates is restricted by the following conditions;
 1. Owners, Lessees, tenants and customers of Lots 1 to 5:- May use the track (marked orange on the attached map) and must travel at no more than **20 km/h**. Vehicles must not travel on any other part of the airfield other than the area marked in orange and must park in designated spots only.
 2. Hangar owners and lessees of private hangars 1-13:- May use the service track to access the green vehicle route to the hangar for the ***purpose of transporting heavy loads* or to store their vehicle in the hangar for periods of overnight or longer***. This access is a ***privilege, not a right***. This access does **NOT** extend to friends, family or visitors. Vehicles must not travel on any other part of the airfield other than the areas marked in green and orange and must not park where you may cause an obstruction. Vehicles must not exceed **10 km/h**.
 3. Hangar owners and lessees of hangars to the north east:-May use the service track to access the green vehicle route to the parking areas. The areas marked orange may be used for the ***purpose of transporting heavy loads* or to store their vehicle in the hangar for periods of overnight or longer***. This access is a ***privilege, not a right***. This access does **NOT** extend to friends, family or visitors. Vehicles must not travel on any other part of the airfield other than the areas marked in green and orange and must not park where you may cause an obstruction. Vehicles must not exceed **20 km/h. (10 km/h when wet)**.
 4. Hangar owners and lessees of hangars to the South:- Please use the gate near the Fuel Bowsers and use the track to the southern areas - for the ***purpose of transporting heavy loads* or to store their vehicle in the hangar for periods of overnight or longer***. This is a dry weather track only (see note 21). Do not drive on any other part of the airfield, do not drive on Aircraft Movement Areas and do not exceed **10 km/h**.
 5. All other persons:- Must speak with Airport Management before passing through the gates. They must remain in direct supervision at all times and obey all requests.
 6. **Any vehicle over 4500kg and/or longer than 6 metres (including trailers) MUST get approval from airport management before entering the airport and CANNOT use the main gate - all access for heavy/long vehicles must come through via one of the double gates.**
*** Heavy Loads - Items 16kg or heavier.**
20. Always leave any gate as it is found, i.e. if you opened one then close it once passing through.
21. All areas within the airport are **dry weather only**, access will be limited to emergency situations only during wet weather. Some roads have been upgraded for all weather

usage, when wet please **restrict speed to 10 km/h** and avoid puddles and absolutely do not go on grassed, wet and/or any aircraft movement areas including taxiways. **If it is wet you will not be able access your hangar with a vehicle.**

- 22. Adequate access to the hangars is provided by parking in the car park and walking to the hangars.
- 23. Vehicles must **NEVER** drive **along** or **across** any tarmac area on the Goolwa Airport, unless specially marked or specific permission has been given by Airport Management.

On the airfield

- 24. Visitors, friends, relatives, customers etc. should be under supervision or escorted at all times and not allowed to wander on **ANY** aircraft movement area.
- 25. No children are allowed on the airport unless under close supervision. Close supervision requires an adult to be within 1 metre of the child at all times.
- 26. No animals (including dogs) are allowed on the airfield. Dogs transported in aircraft must be kept on a leash at all times. Seeing eye dogs are exempt from this rule.

Failure to obey these rules will result in access being denied.

I have read and agree to abide by all the above rules and conditions (please keep this copy for future reference).

Signed Dated/...../.....

Print Name Aircraft Type

Address Rego

.....

Phone Number

Email